



### Product Description

The Phase monitor MH 9352/001 of the VARIMETER series monitors over and undervoltage, voltage failure as well as wrong phase sequence at three-phase networks. The measurement is very simple and can be carried out without much wiring effort, as no separate auxiliary voltage is required. Early detection of impending failures and preventive maintenance prevent costly damage and as a user you benefit from the operational safety and high availability of your system.


### Your Advantages

- Space and cost saving due to 3 devices in one housing
- Easy fault diagnostics by 3 separate DEL
  - Overvoltage
  - Undervoltage
  - Phase sequence and power failure
- Differentiated error transfer to PLC possible, e.g. for logging of error type and time
- Large measuring range 3 AC 85 ... 550 V by built-in power supply with wide voltage range

### Features

- Acc. to IEC/EN 60255-1
- 3 phases mains monitoring on
  - Overvoltage
  - Undervoltage
  - Phase sequence and voltage failure
- 3 separate output relays with 1 changeover contact each
- Without N connection
- Closed circuit operation
- As option with different connection blocks
  - With fixed screw terminals
  - With plug-in screw terminals
  - With plug-in cage-clamp terminals
- Width: 45 mm

### Function Diagram

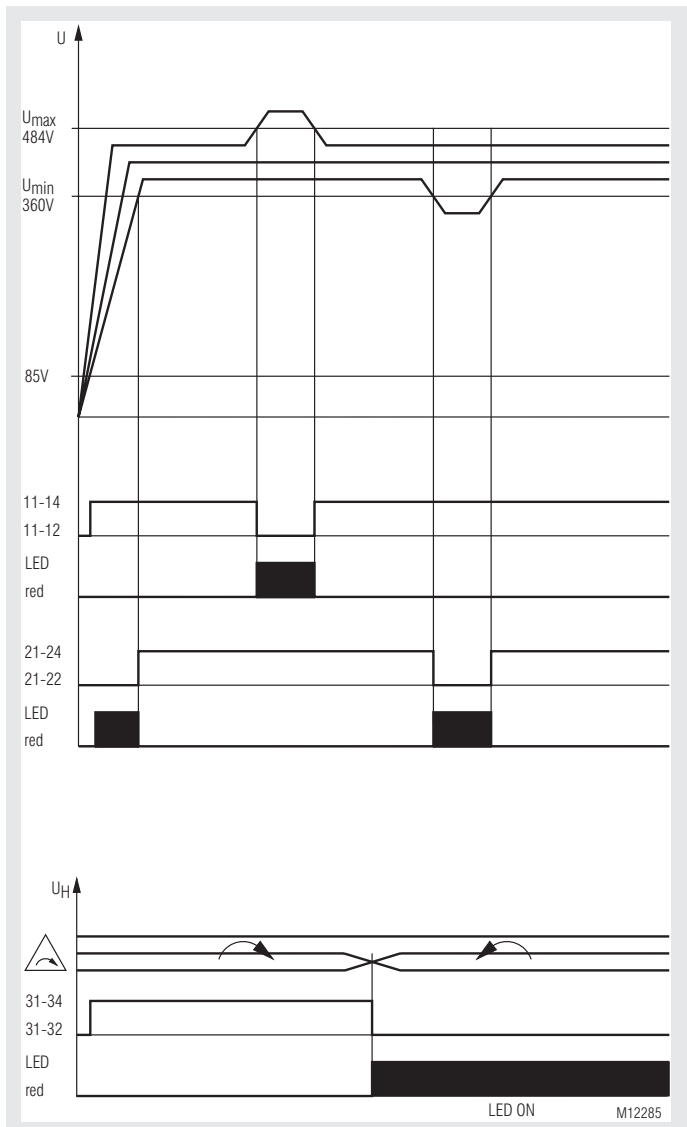

### Approvals and Markings



### Application


Monitoring of 3-phase networks for overvoltage, undervoltage and phase sequence.

- Crane applications with voltage supply via mains or mobile generator sets.

### Function

The phase monitor monitors the 3 phases in a network for overvoltage, undervoltage, phase sequence and voltage failure. The setting values are fixed. The device works de-energized without auxiliary supply voltage. If an error is detected, the corresponding LED lights up. At voltages below AC 85 V at L2 and L3 the device is switched off.

## Circuit Diagram

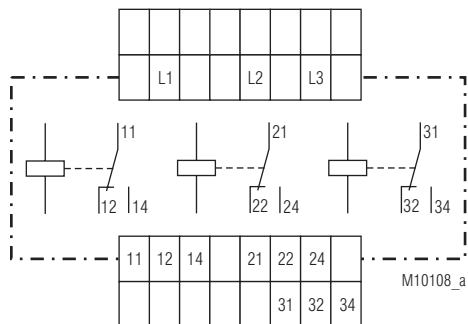

## Connection Terminals

Terminal designation	Signal designation
L1, L2, L3	Connection phase voltage
11, 12, 14	Indicator relay for overvoltage
21, 22, 24	Indicator relay for undervoltage
31, 32, 34	Indicator relay for phase sequence

## Indication

Green LED $U_N$ :	On, when operating voltage connected between L2 and L3 ( $U > AC85V$ )
Red LED $U_{max}$ :	On, at overvoltage
Red LED $U_{min}$ :	On, at undervoltage
Red LED $\Delta$ :	On, at wrong phase sequence

## Note

Because of the gold plated contacts the device can be used to switch small loads 10 mVA ... 12 VA, 10 mW ... 12 W in the range of 2 ... 60 V, 2 ... 300 mA. The gold plated contacts allow also to switch the maximum current but the gold plating will be burnt off. After that the contacts cannot be used any more to switch the small loads.

## Technical Data

### Input

<b>Nominal voltage <math>U_N</math></b>	3 AC 400 V
<b>Voltage range:</b>	3 AC 85 ... 550 V
<b>Nominal frequency:</b>	50 / 60 Hz
<b>Frequency range:</b>	45 ... 400 Hz
<b>Response values:</b>	Fixed
<b>Relay 1:</b>	$U \geq 484$ V AC Overvoltage
<b>Relay 2:</b>	$U \leq 360$ V AC Undervoltage
<b>Relay 3:</b>	Phase sequence
<b>Hysteresis:</b>	< 4%

### Output

**Contacts:** 3 C/O contacts

### For low loads with 3 $\mu$ m gold contacts

**Switching current:** 2 ... 300 mA  
**Switching voltage min. / max:** AC/DC 2 V / AC/DC 60 V

### At standard load:

**Thermal current  $I_{th}$ :** 3 x 4 A

### Switching capacity

To AC 15

NO contact: 3 A / AC 230 V IEC/EN 60947-5-1

NC contact: 1 A / AC 230 V IEC/EN 60947-5-1

To DC 13

1 A / DC 24 V IEC/EN 60947-5-1

### Electrical life

At 3 A, AC 230 V  $\cos \varphi = 1$ :  $2 \times 10^5$  switching cycles

**Perm. operating frequency:** 1800 / h

### Short circuit strength

**max. fuse rating:** 4 A gG / gL IEC/EN 60947-5-1

**Mechanical life:**  $30 \times 10^6$  switching cycles

## General Data

**Nominal operating mode:** Continuous operation

### Temperature range

Operation: - 25 ... + 60°C

Storage: - 25 ... + 60°C

**Altitude:**  $\leq 2000$  m

### Clearance and creepage distance

Rated impulse voltage /

pollution degree

Inputs L1, L2, L3 to all others: 6 kV / 2 IEC/EN 60664-1

Contacts 11/12/14, 21/22/24,

31/32/34 to each other: 6 kV / 2 IEC/EN 60664-1

Overvoltage category: III

### EMC

Electrostatic discharge (ESD): 8 kV (air) IEC/EN 61000-4-2

HF irradiation

80 MHz ... 2,7 GHz: 10 V / m IEC/EN 61000-4-3

Fast transients: 2 kV IEC/EN 61000-4-4

Surge voltage

Between

wires for power supply: 1 kV IEC/EN 61000-4-5

Between wire and ground: 2 kV IEC/EN 61000-4-5

HF-wire guided: 10 V IEC/EN 61000-4-6

Interference suppression:

Limit class value A<sup>\*)</sup>

<sup>\*)</sup>The device is designed for the usage under industrial conditions (Class A, EN 55011). When connected to a low voltage public system (Class B, EN 55011) radio interference can be generated. To avoid this, appropriate measures have to be taken.

### Degree of protection

Enclosure: IP 40 IEC/EN 60529

Terminals: IP 20 IEC/EN 60529

**Housing:** Thermoplastic with VO behaviour acc. to UL Subject 94

**Vibration resistance:** Amplitude 0.35 mm, frequency 10 ... 55 Hz

**Climate resistance:** 20 / 060 / 04 IEC/EN 60068-1

## Technical Data

<b>Terminal designation:</b>	EN 50005	
<b>Wire connection</b>		DIN 46228-1/-2/-3/-4
<b>Screw terminal (fixed):</b>	1 x 4 mm <sup>2</sup> solid or 1 x 2.5 mm <sup>2</sup> stranded ferruled (isolated) or 2 x 1.5 mm <sup>2</sup> stranded ferruled (isolated) or 2 x 2.5 mm <sup>2</sup> solid	
Insulation of wires or sleeve length:	8 mm	
<b>Terminal block with screw terminals</b>		
Max. cross section:	1 x 2.5 mm <sup>2</sup> solid or 1 x 2.5 mm <sup>2</sup> stranded ferruled (isolated)	
Insulation of wires or sleeve length:	8 mm	
<b>Terminal block with cage clamp terminals</b>		
Max. cross section:	1 x 4 mm <sup>2</sup> solid or 1 x 2.5 mm <sup>2</sup> stranded ferruled (isolated)	
Min. cross section:	0.5 mm <sup>2</sup>	
Insulation of wires or sleeve length:	12 mm	
<b>Wire fixing:</b>	Plus-minus terminal screws M3,5 box terminals with wire protection or cage clamp terminals	
<b>Fixing torque:</b>	0.8 Nm	
<b>Mounting:</b>	DIN rail	IEC/EN 60715
<b>Weight:</b>	Approx. 260 g	

## Dimensions

### Width x height x depth

MH 9352.13:	45 x 90 x 98 mm
MH 9352.13 PC:	45 x 111 x 98 mm
MH 9352.13 PS:	45 x 104 x 98 mm


## Standard Type

MH 9352.13PC/001	3 AC 360 V / 3 AC 484 V
Article number:	0062548
• Nominal voltage:	3 AC 400 V
• Response value:	≤ 3 AC 360 V / ≥ 3 AC 484 V
• Phase sequence detection	
• Output:	3 changeover contacts
• Width:	45 mm


## Ordering Example

MH 9352	.13	3 AC 360 V	3 AC 484 V	
				Response value overvoltage
				Response value undervoltage
				Type of terminals
				without indication:
				terminal blocks fixed
				with screw terminals
				PC (plug in cage clamp):
				pluggable
				terminal blocks
				with cage clamp terminals
				PS (plug in screw):
				pluggable
				terminal blocks
				with screw terminals
				Contacts
				Type

## Options with Pluggable Terminal Blocks

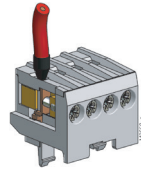

Screw terminal (PS/plugin screw)

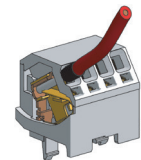

Cage clamp terminal (PC/plugin cage clamp)

## Notes

Removing the terminal blocks with cage clamp terminals

1. The unit has to be disconnected.
2. Insert a screwdriver in the side recess of the front plate.
3. Turn the screwdriver to the right and left.
4. Please note that the terminal blocks have to be mounted on the belonging plug in terminations.

